

RR-927 SYSTEM REMOTE CONTROL

The RR-927 is the system remote control from Rotel. This remote will operate all current 900 Series Rotel remote controllable components. To use the RR-927 it is necessary to set the Program Codes for your individual Rotel components. The following list will show the code settings for Initial Set Up of the RR-927. Please set the RR-927 for your particular system needs. These codes set the commands for each section of the controls on the various Rotel components.

A. Amplifier or preamplifier model number and code setting

- A1: RTC-940AX, RTC-950AX, RX-950AX, RC-972.
- A2: RA-985BX, RA-945, RC-995, RC-972.
- A4: RC-990BX.

B. Tuner model number

- B1: RTC-940AX, RTC-950AX, RX-950AX, RT-940AX.
- B4: RT-990BX.

C. CD Players

- C1: RCD-970BX, RCD-975, RCD-945AX, RCD-955AX, RCD-965BX.
- C2: RCD-940BX, RCC-940AX, RCC-935
- C3: RCD-930AX, RCD-950, RCC-945
(W / + disc advance on RCC-935, RCC-940, RCC-945).
- C4: RCD-990.

D. Cassette decks

- D1: RD-960BX.

The RR-927 is initially preset to operate the following items:

- Amplifier (A2) RA-985BX, RA-945, RC-995, RC-972.
- Tuner (B1) RTC-940AX, RX-950AX, RT-940AX.
- CD player (C1) RCD-970BX, RCD-975.
- Cassette deck (D1) RD-960BX.

To set the RR-927 for operation with other components will require the new components code to be entered into the RR-927. This is easily done. To select Remote Codes for:

- STANDBY(AMP),** used to set codes for amplifiers.
- TUNER,** used to set codes for tuners.
- CD,** used to set codes for CD players.
- TAPE 1,** used to set codes for cassette decks.

SIMULTANEOUSLY press the letter and number listed with your Rotel model to set the command codes for your Rotel component. For example: To set the remote control for C3 to operate the RCD-930AX, **press CD and Number 3 buttons at the same time.** This will set the RR-927 to control the RCD-930AX.

The numbered buttons 0-9 on RR-927 are **Direct Access Keys** for the Tuner or CD players. Press **Tuner** and then choose preset stations. Press **CD** and choose track numbers for a CD. To access a number *higher than 10* requires the following steps for **RCD-930AX, RT-940AX, and RT-990BX** (C3, B1, and B4): Press the +10 button and then press the button that equals the remainder of the track number you want. Example: Press +10 and then 3 = 13.

For **RCD-970BX, RCD-975, and RCD-940BX** (C1, C2) Press 1 and then 3 = 13. (Not +10.)

For the Tuner section of **RX-950AX, RTC-950AX and RTC-940AX** (B1), the +10 button does not work. To access higher than 8, press 9 (**Button 9 = +8**) and then the remainder of the number you want. Example: Button 9 + 5 = 13. Button 9 + 1 = 9.

