Software Upgrade and RS232 Control Cable Pin Configuration

DB 9:
Pin #1 – Looking at inside of DB9 connector where cable attaches, pin #1 is on bottom right.

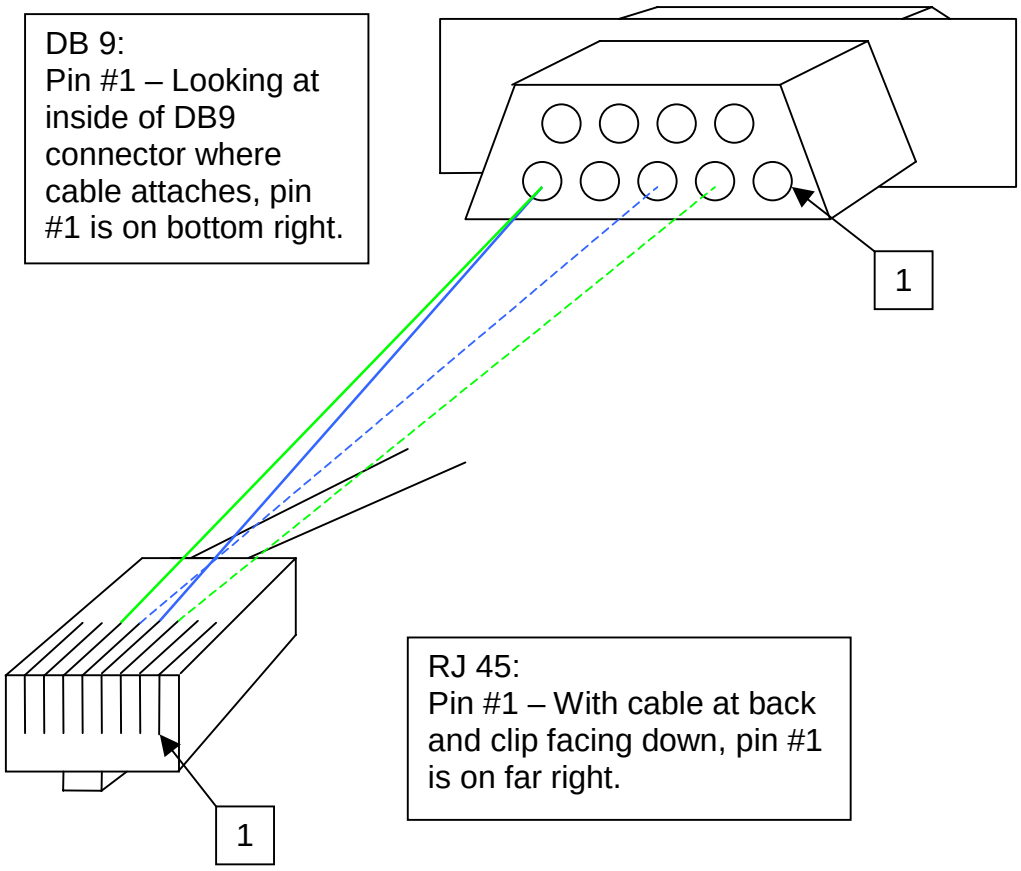

RJ 45:
Pin #1 – With cable at back and clip facing down, pin #1 is on far right.

RJ 45	DB 9
#3 TX	#2 RX
#4 Gnd	#5 Gnd
#5 RX	#3 TX
#6 Gnd	#5 Gnd

1. Computer I/O Terminal

RJ45 Connector
SY010-8P/K

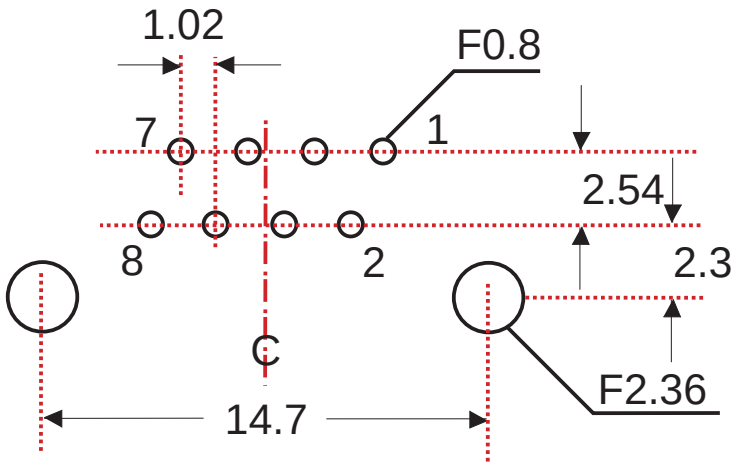

Layout TOP View
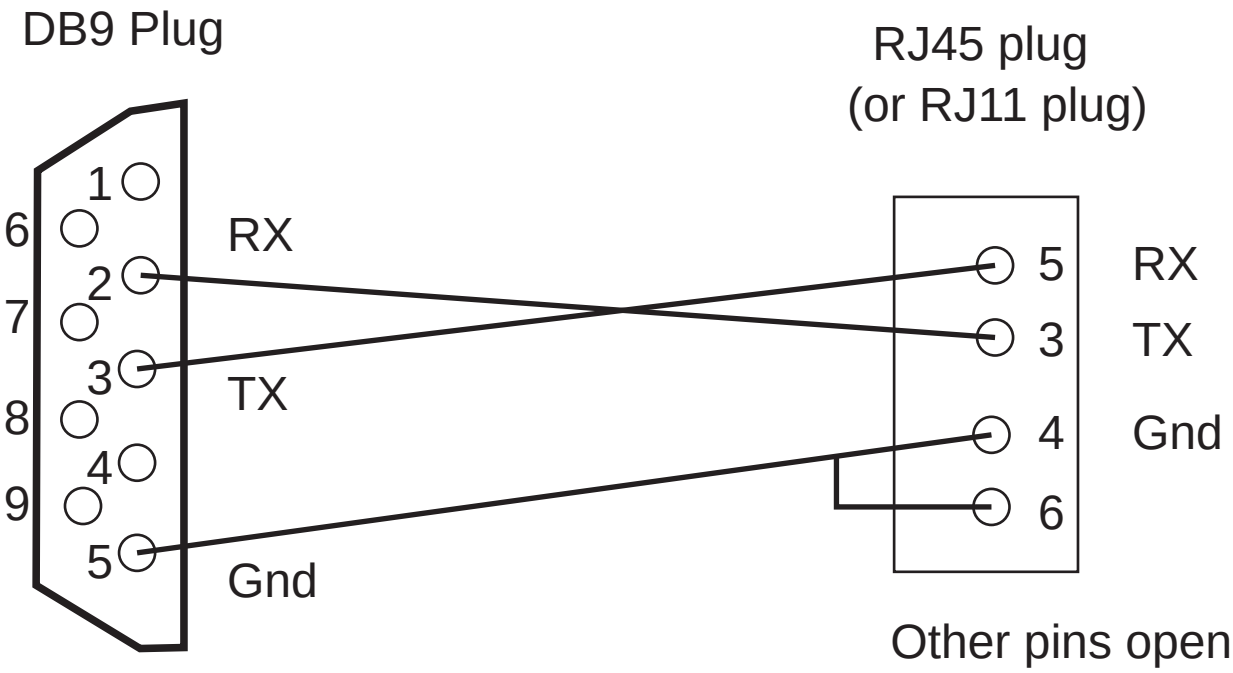
2. Connection Cable